

COSMIC CARBONE SLR 11

Use: for road bike use only. Any other use (such as on a tandem, cyclo-cross bike, or off-road use...) is highly inadvisable, is the sole responsibility of the user and voids the Mavic warranty.



Recommended maximum weight of the cyclist and equipment: 100 kg.

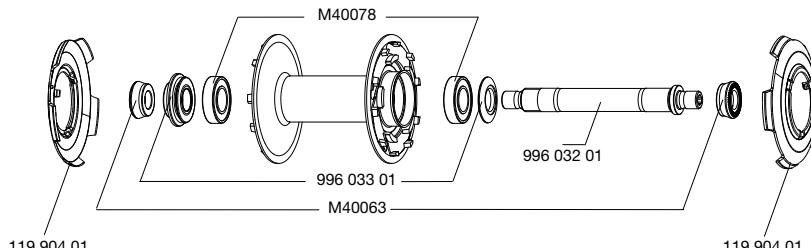
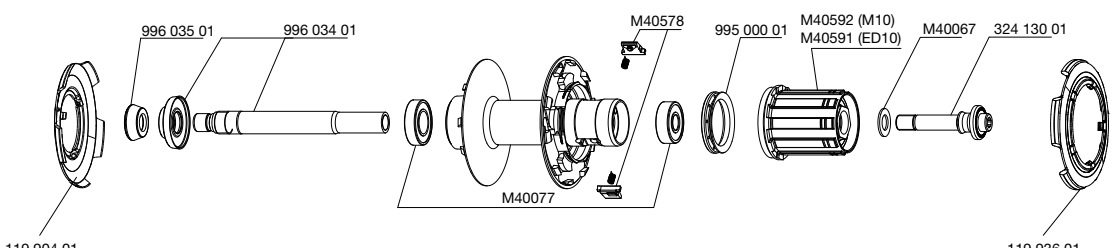
WHEEL WEIGHT WITHOUT QUICK-RELEASE SKEWER AND WITHOUT TIRE

Front	725 g
Rear M10	885 g
Rear ED11	870 g

WHEEL REFERENCES

Front	111 672 10
Rear M10	111 673 11
Rear ED11	111 674 12
Pair M10	111 675 14
Pair ED11	111 676 14

<h3>RIMS</h3> 	SALES REFERENCES: Front: 120 169 10 Rear: 129 169 13
	<div style="display: flex; justify-content: space-between;"> <div style="width: 45%;">  <p>Ø VALVE HOLE Ø: 6.5 mm Length: ≥ 55 mm</p> </div> <div style="width: 45%;">  <p>RECOMMENDED TIRE WIDTH Dimensions: ETRTO 622 x 13C Recommended tire width: 19 to 28 mm</p> </div> </div> <p>When replacing the rear rim: The side of the rim on which the spoke holes are the nearest to the trailing edge is the drive side.</p> <div style="border: 1px solid black; padding: 5px;">  <p>EXALITH: for efficient and long-lasting braking performance, use only the special Mavic® Exalith® brake pads supplied with your wheels. The use of other brake pads may be dangerous for the user and may void the warranty. Please carefully read the «Exalith Warning» provided with your wheels. Clean with a dry cloth or soapy water if necessary. The brake pads can be ordered separately using the following references 120 164 01 (HG, Sram, Mavic) and 120 165 01 (ED).</p> </div>

<h3>HUBS</h3>	MAINTENANCE: Clean with a dry cloth or soapy water if necessary. Do not use a high-pressure washer.
	
	

<h3>WHEEL BUILDING</h3>	REFERENCES AND LENGTHS: Front and rear non-drive side: 119 901 01, R2R spokes (per 5, with ABS nipples) and 2 hub caps Drive side: 996 836 01, R2R spokes (per 7, with ABS nipples)
FEATURES: Unidirectional R2R carbon spokes (rim to rim), ABS nipples	LACING PATTERN: Front and Rear: 2-cross lacing on both sides
	TENSION: Front: 80 to 100 kg Rear drive side: 130 to 150 kg

<h3>ACCESSORIES</h3>	WHEELS SUPPLIED WITH: <ul style="list-style-type: none"> • BR 601 front quick-release skewer M40149 • BR 601 rear quick-release skewer M40150 • Removable computer magnet (front wheel) 996 245 01 • Free play adjustment wrench M40123 (with rear wheel) • Aerodynamic spoke wrench 101 295 01 (with rear wheel) • Spoke wrench M40001 (with rear wheel) • Aluminum valve extender, 60 mm, 118 952 01 • Rim tape • ED11 12D locking ring (with rear wheel ED11) 108 317 01 • 1 pair of Mavic Exalith brake pads for Exalith brake track with the rear wheel: HG/Sram/Mavic 120 164 01 or ED 120 165 01 • 2 pairs of Mavic Exalith brake pads for Exalith brake track with the front wheel: HG/Sram/Mavic 120 164 01 and ED 120 165 01 • Yksion GripLink front clincher 23c 118 498 01 • Yksion PowerLink rear clincher 23c 118 502 01 • 2 Mavic butyl inner tubes 111 040 01 • Wheel user guide • Tire user guide 	<h3>MAINTENANCE</h3> <table style="width: 100%;"> <tr> <td style="vertical-align: top;"> Replacing the front axle and bearings Replacing the rear axle Maintaining and replacing the free wheel mechanism Replacing the rear bearings Replacing a spoke Replacing the front rim Replacing the rear rim Important notes about Exalith rims Tire replacement </td> <td style="vertical-align: top;"> See 2005 TM, page 20 See 2008 TM, page 23 See 2003 TM, page 21 See 2008 TM, page 24 See 2009 TM, page 32 See 2009 TM, page 33 See 2009 TM, page 34/35 See 2011 TM, page 28 See Mavic tire user guide </td> </tr> </table> <p>Refer to the website for quick and convenient access to information: www.tech-mavic.com</p>	Replacing the front axle and bearings Replacing the rear axle Maintaining and replacing the free wheel mechanism Replacing the rear bearings Replacing a spoke Replacing the front rim Replacing the rear rim Important notes about Exalith rims Tire replacement	See 2005 TM, page 20 See 2008 TM, page 23 See 2003 TM, page 21 See 2008 TM, page 24 See 2009 TM, page 32 See 2009 TM, page 33 See 2009 TM, page 34/35 See 2011 TM, page 28 See Mavic tire user guide
Replacing the front axle and bearings Replacing the rear axle Maintaining and replacing the free wheel mechanism Replacing the rear bearings Replacing a spoke Replacing the front rim Replacing the rear rim Important notes about Exalith rims Tire replacement	See 2005 TM, page 20 See 2008 TM, page 23 See 2003 TM, page 21 See 2008 TM, page 24 See 2009 TM, page 32 See 2009 TM, page 33 See 2009 TM, page 34/35 See 2011 TM, page 28 See Mavic tire user guide			