USE: Use only on a road bike. Any other use (such as on a tandem, cyclo-cross bike, or off-road use...) is strongly inadvisable, is the sole responsibility of the user and voids the Mavic warranty.

WHEEL WEIGHTS WITHOUT QUICK RELEASE SKEWER:

Front: 785 q Rear M10: 985 g Rear ED10: 970 g

REFERENCES:

Front: 995 272 10 Rear M10: 995 273 11 Rear ED10: 995 274 12 Pair M10: 995 280 14 Pair ED10: 995 275 14

RIMS

52

WIDTH

SALES REFERENCES:

Front: 995 370 10 995 370 13

VALVE HOLE Ø



Ø: 6.5 mm Length.: ≥ 32 mm

RECOMMENDED TIRE WIDTH AND PRESSURE



Dimensions: Ø 700 only

ETRTO 622 x 13 compatible Recommended tire width: 19 to 28




Recommended tire pressure: See page 17


When replacing the rear rim:

- 1. With the valve hole towards you, turn the rim such that the traceability label (bar code) cannot be seen.
- 2. The spoke in the first hole to the right of the valve hole should be inserted on the drive side and should be a non-traction spoke.

HUBS

MAINTENANCE: Clean with a dry cloth or soap and water. Do not use pressurized water.

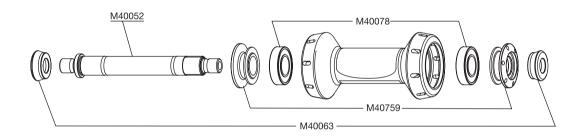

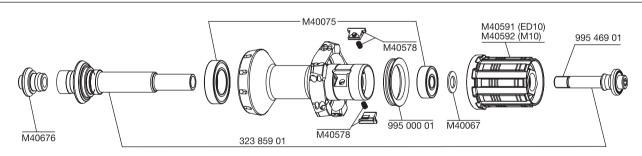

WHEEL BUILDING

REFERENCES AND LENGTHS

Front:

Rear drive side: Rear non-drive side: 323 903 01, length 291 mm (per 8, with nipples) 323 904 01, length 307 mm (per 10, with nipples) 323 905 01, length 289 mm (per 10, with nipples)

FEATURES:

Black, bladed, stainless steel, straight pull spokes with brass ABS nipples (self-locking). Yellow front nipples: Ø thread: 2.3 mm

Rear nipples: Ø thread: 2.6 mm

LACING PATTERN:

Front: radial

Rear: crossed 2 drive side, radial non-drive side

TENSION:

Front: 105 to 145 kg Rear drive side: 120 to 160 kg

ACCESSORIES

WHEELS SUPPLIED WITH:

• BR 601 Titanium front quick release skewer 323 485 01

- BR 601 Titanium rear quick release skewer 323 486 01
- Valve extender M40013
- Rim tape
- Wheel bags M40135
- Computer magnet M40540 (with front wheel)
- Angled spoke wrench M40001 (with rear wheel)
- Wrench for aerodynamic spokes M40567 (with rear wheel)
- Free play adjustment wrench M40123 (with rear wheel) • ED10 12D locking ring M40640 (with rear wheel ED10)
- User guide and warranty card

MAINTENANCE

Replacing the front axle and bearings

Replacing the rear axle

Maintaining and replacing the free wheel mechanism

Replacing the rear bearings

Replacing a spoke Replacing the front rim

Replacing the rear rim

See 2005 TM page 20 See page 20 See page 21

See 2003 TM page 22

See 2005 TM page 23 See 2005 TM page 24

See 2005 TM page 27

To quickly consult this information in a practical manner, refer to www.tech-mavic.com