CROSSMAX[®] SLR DISC LEFTY

USE: Use only on a Cross Country MTB fitted with disc brakes. Any other use (such as on a tandem, Cyclo-Cross bike, Cross Mountain, road bike, free-ride or downhill bike...) is strongly inadvisable, is the sole responsibility of the user and voids the Mavic warranty.

FINISHED WHEEL WEIGHT: 675 g WHEEL REFERENCES INTERNATIONAL STANDARD: Front: 995 325 10

Pair (with rear Crossmax SLR Disc):

995 325 10 995 327 14

	SALES REFERENCES	ECOMMENDED TIRE WIDTH AND PRESSURE
RIM	Front: 995 375 10	Dimensions: Ø 26" only
		ETRTO 559 x 17 and UST Tubeless compatible See page 17
	Ø: 6.5 mm Length: ≥ 32 mm	he instructions given in the UST user guide must be followed to the letter when fitting a UST ubeless tire: wet the tire beads and rim tape using soapy water, check the 2 beads of the tire are orrectly positioned at the bottom of the rim's central groove and across the base of the valve; hen inflate the tire energetically until primary sealing is made.
	When replacing the rim: 1. With the valve hole near you, the 2. The spoke in the 1st hole to the r	e raised indicator bump must be to the left of the valve hole right of the valve hole should be inserted on the disc side and should be a non-braking spoke.
HUB	MAINTENANCE: Clean with a dry cloth or soap and water. Do not use pressurized water.	
BUILDING		
FEATURES: Black (1 red spoke), bladed, aluminum M7 nipples (self-lo	Zicral, straight pull, sunk spokes with inte	egrated Crossed 2 on both sides 110 to 145 kg
ACCESSORIES	WHEEL SUPPLIED WITH:	MAINTENANCE
 Fitting accessories M40777 Wheel bags Removable UST valve 995 282 01 Computer magnet M40540 (with front wheel) User guide and warranty card 		Fitting and removing the front wheel from the forkSee 2004 TM page 18Replacing the bearingsSee 2004 TM page 18Replacing a spokeSee 2003 TM page 24Replacing the rimSee page 22To quickly consult this information in a practical manner, refer to www.tech-mavic.com