

## 1.1.2. BEARING KIT ON THE CROSSMAX SL DISC LEFTY WHEEL

### Tools needed

- 1 hub wrench, like pliers
- 1 bearing drifts 323 945 01 (bearings on side opposite disc)
- 1 bearing drifts M40218 (bearings on disc side)

1. Loosen the protective bearing hood with the hub wrench ;
2. Drive out the bearings with the bearing drifts M40120 (long rod, see page 46) ;
3. Mount the bearings using the bearing drifts 323 945 01 (opposite disc side) and M40218 (disc side) ;
4. Mount the protective bearing hood with the hub wrench (9 Nm torque).

