

AKSIUM 08

USE: use only on a road bike. Any other use (such as on a tandem, cyclo-cross bike, or off-road use...) is strongly inadvisable, is the sole responsibility of the user and voids the Mavic warranty.

WHEEL WEIGHTS WITHOUT QUICK RELEASE SKEWER:

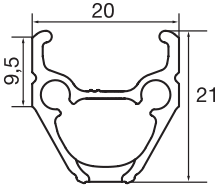



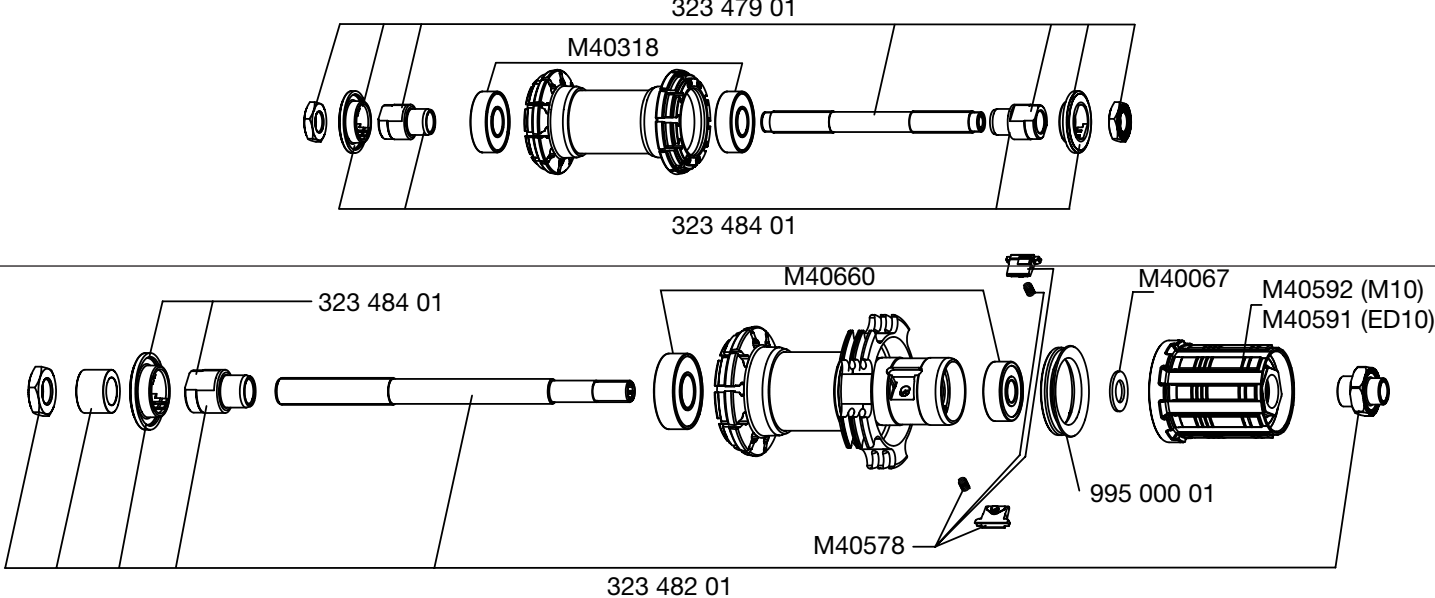
Front: 870 g
Rear M10: 1000 g
Rear ED10: 985 g

BLACK WHEEL REFERENCES:

Front: 995 660 10
Rear M10: 996 661 11
Rear ED10: 995 662 12
Pair M10: 995 664 14
Pair ED10: 995 663 14

SILVER WHEEL REFERENCES:

Front: 995 581 10
Rear M10: 995 582 11
Rear ED10: 995 652 12
Pair M10: 995 653 14
Pair ED10: 995 654 14

RIMS	SALES REFERENCES: Black: 108 432 14 (front and rear) Silver: 108 431 14 (front and rear)	
	VALVE HOLE Ø  Ø: 6.5 mm Length: ≥ 32 mm	RECOMMENDED TIRE WIDTH AND PRESSURE  Dimensions: ETRTO 622 x 15C Recommended tire width: 19 to 32 mm  Recommended tire pressure: See page 21
HUBS	MAINTENANCE: Clean with a dry cloth or soap and water. Do not use pressurized water.	
		
<p>As the front hub is made up of 3 parts, and the rear hub of 2 parts, maintenance operations to the hubs (replacing the axle or bearings) must always be carried out on the assembled wheel (hub, rim and spokes assembled).</p>		
WHEEL BUILDING	REFERENCES AND LENGTHS: Black: Front + rear non-drive side: 996 075 01, length 282.5 mm (per 10, with nipples) Drive side: 996 076 01, length 305 mm (per 10, with nipples) Silver: Front + rear non-drive side: 996 077 01, length 282.5 mm (per 10, with nipples) Drive side: 996 078 01, length 305 mm (per 10, with nipples)	
FEATURES: Black steel or silver stainless steel, bladed straight pull spokes with ABS nipples		LACING PATTERN: Front: radial Rear: crossed 2 drive side, radial non-drive side
		TENSION: Front: 80 to 90 kg Rear drive side: 150 to 165 kg
ACCESSORIES	WHEELS SUPPLIED WITH:	MAINTENANCE
<ul style="list-style-type: none"> Traditional aluminum front quick release skewer M40350 Traditional aluminum rear quick release skewer M40351 ED10 12D locking ring M40640 (with rear wheel ED10) Rim tape User guide and warranty card 		<ul style="list-style-type: none"> Replacing the front axle and bearings Replacing the rear axle Maintaining and replacing the free wheel mechanism Replacing the rear bearings Replacing a spoke Replacing the front rim Replacing the rear rim <p>To quickly consult this information in a practical manner, refer to www.tech-mavic.com</p>
		See 2004 TM page 19 See 2004 TM page 20 See 2004 TM page 21 See 2004 TM page 22 See page 25 See page 25 See page 26