

# CROSSMAX SLR DISC 09 LEFTY



**USE:** use only on a Cross Country MTB fitted with disc brakes. Any other use (such as on a tandem, road bike, cyclo-cross bike, free-ride or downhill bike...) is highly inadvisable, is the sole responsibility of the user and voids the Mavic warranty.

Recommended maximum weight of the cyclist and his equipment: 85 kg.

## WHEEL WEIGHTS WITHOUT QUICK-RELEASE SKEWER

Front: 695 g  
Rear: 830 g

## WHEEL REFERENCES

Front: 996 522 10  
Rear: 996 413 13  
Pair: 996 523 14

<b>RIMS</b>	<b>REFERENCES:</b> Front: 996 873 10 Rear: 996 873 13	
	<b>Ø VALVE HOLE</b> Ø: 6.5 mm Length.: ≥ 32 mm	<b>RECOMMENDED TIRE WIDTH</b> Dimensions: Ø 26" ETRTO 559 x 17C compatible and Tubeless UST. Recommended tire width: 1.0" to 2.1"
	<b>When replacing the front rim:</b> 1. With the valve hole near you, the raised indicator bump must be to the <b>right</b> of the valve hole 2. The spoke in the first hole to the right of the valve hole is a non-braking spoke and should be inserted in the disc side.  <b>When replacing the rear rim:</b> 1. With the valve hole near you, the two raised indicator bumps must be to the <b>right</b> of the valve hole 2. The spoke in the first hole to the right of the valve hole should be inserted on the drive side in a marked hole on the hub	
<b>HUBS</b>	<b>MAINTENANCE:</b> Clean with a dry cloth or soap and water if necessary. Do not use a high-pressure washer.	
<b>WHEEL BUILDING</b>	<b>REFERENCES AND LENGTHS:</b>	Front: 995 376 01, length 261 mm, (per 12 + 3 red, integrated nipples) Rear drive side: 995 377 01, length 248 mm, (per 12 + 1 red, integrated nipples) Rear non-drive side: 996 874 01, length 263 mm, (per 12 + 2 red, integrated nipples)
<b>FEATURES:</b> Black Zicral double butted straight pull spokes (including two decorated per wheel) with integrated, self-locking M7 aluminum spoke nipples.	<b>LACING PATTERN:</b> Front: crossed 2 on both sides Rear: Isopulse	
<b>TENSION:</b> Front disc side: 120 to 140 kg Rear drive side: 120 to 140 kg		
<b>ACCESSORIES</b>	<b>WHEELS SUPPLIED WITH:</b>	<b>MAINTENANCE</b>
<ul style="list-style-type: none"> <li>• BX 601 Titanium rear quick-release skewer 995 389 01</li> <li>• Lefty assembly accessories M40777 (with front wheel)</li> <li>• Computer magnet M40540</li> <li>• Spoke wrench M40494 (with rear wheel)</li> <li>• UST valves 995 282 01</li> <li>• Free play bearing adjustment wrench M40123 (with rear wheel)</li> <li>• User guide</li> </ul>	Fitting and removing the front wheel on the fork Replacing the front axle and bearings Replacing the rear axle Maintaining and replacing the free wheel mechanism Replacing the rear bearings Replacing a spoke Replacing the front rim Replacing the rear rim	See 2004 TM, page 18 See page 26 See 2007 TM, page 20 See 2007 TM, page 21 See 2003 TM, page 22 See 2003 TM, page 24 See page 37 See 2006 TM, page 17
To consult this information quickly in a practical manner, refer to <a href="http://www.tech-mavic.com">www.tech-mavic.com</a>		