

## REPLACING BEARINGS ON THE CROSSMAX SLR DISC 09 LEFT WHEEL

### Tools needed

- 1 clamp hub wrench
- 1 bearing press kit 323 945 01 for the non-disc side bearing
- 1 bearing press kit M40218 for the disc side bearing



Loosen the non-disc side bearing protection cap with the hub wrench.



Remove the spacer and the wheel tightening screw on the fork.



Use the bearing press kit to remove the bearings.



Refit the bearings using the bearing press kit 323 945 01 (non-disc side) and M40218 (disc side).



Clip the tightening screw to the spacer at the flat-bottomed side (see photo)



Refit the bearing protection cap with the hub wrench (9 Nm torque).