

CROSSLINE Center-Lock



USE: use only on a Enduro-Freeride MTB fitted with disc brakes. Any other use (such as on a tandem, road bike, cyclo-cross bike, downhill bike...) is highly inadvisable, is the sole responsibility of the user and voids the Mavic warranty.

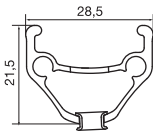


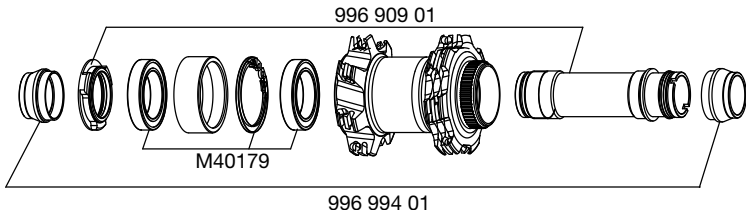
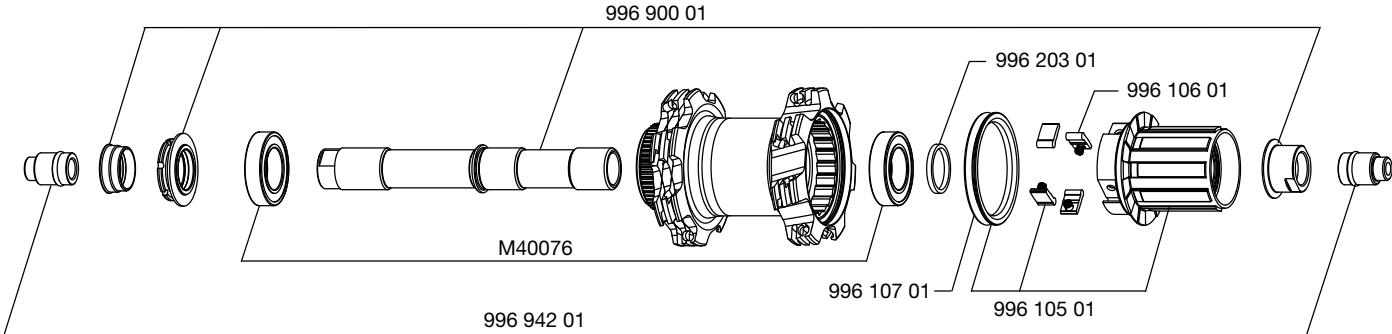
Recommended maximum weight of the cyclist and his equipment: 100 kg.

WHEEL WEIGHTS WITHOUT QUICK-RELEASE SKEWER

Front: 965 g
Rear: 1080 g

WHEEL REFERENCES

Front: 996 230 10
Rear: 996 231 13
Pair: 996 232 14

RIMS	REFERENCES: Front: 996 902 15		
	Ø VALVE HOLE  Ø: 8.5 mm Length.: ≥ 32 mm	RECOMMENDED TIRE WIDTH  Dimensions: Ø 26" ETRTO 559 x 21C compatible Recommended tire width: 2.1" to 2.5"	
HUBS	MAINTENANCE: Clean with a dry cloth or soap and water if necessary. Do not use a high-pressure washer.		
			
			
WHEEL BUILDING	REFERENCES AND LENGTHS:	Front and rear: 996 903 01, length 273 mm, (per 14, with nipples)	
FEATURES:	LACING PATTERN:	TENSION:	
Black steel round straight pull spokes with Self Lock system and conventional spoke nipples.	Front and rear: crossed 2 on both sides	Front disc side: 110 to 130 kg Rear drive side: 110 to 130 kg	
ACCESSORIES	WHEELS SUPPLIED WITH:	MAINTENANCE	
<ul style="list-style-type: none">• BX 101 rear quick-release M40352• Fork support kit 20 mm 996 994 01• Axle reducers 12=>9 mm 996 942 01• Rim tape• Free play bearing adjustment wrench M40123 (with rear wheel)• User guide		<div>Replacing the front axle and bearings in the CL model Rear wheel assembly diameter conversion Maintaining and replacing the free wheel mechanism Replacing the rear axle and bearings Replacing a spoke Replacing the front rim Replacing the rear rim</div> <div>See page 28 See page 25 See page 29 See page 30 See 2004 TM, page 25 See 2004 TM, page 28 See 2004 TM, page 29</div>	
To consult this information quickly in a practical manner, refer to www.tech-mavic.com			