

REPLACING THE AXLE AND BEARINGS ON FRONT WHEELS WITH QRM SL HUBS (R-SYS SL – CLINCHER AND R-SYS SL – TUBULAR)

Tools needed:

- Bearing press kit for bearings 323 909 01

Removal



By hand, remove the fork support (clipped onto the axle) from the label side of the hub.



Push the axle to remove it from the hub.




Use the bearing kit to extract the bearings 323 909 01.

Reassembly



Use the bearing kit to fit the bearings 323 909 01.

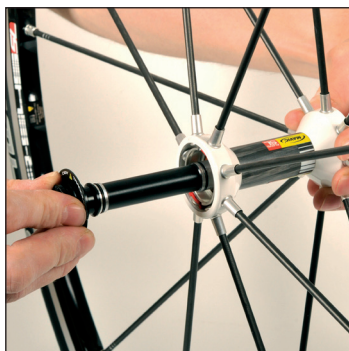

Introduce the axle into the side opposite the hub label.



Select the fork support optimizing the play adjustment using the QRM SL bearing play adjustment procedure.