

## REPLACING QRM SL BEARINGS ON THE REAR WHEELS (R-SYS SL – CLINCHER AND R-SYS SL – TUBULAR)

### Tools needed:

- 1 bearing press kit for SL bearings: 323 909 01

Remove the axle (see page 18) and remove the free wheel mechanism following the procedures specific to each hub (refer to [www.tech-mavic.com](http://www.tech-mavic.com) or the technical manuals from previous years).



Use the bearing kit to extract the bearings 323 909 01.



Fit the new bearings using bearing kit 323 909 01.

Refit the free wheel mechanism following the procedures specific to each hub (refer to [www.tech-mavic.com](http://www.tech-mavic.com) or the technical manuals of previous years) and fit the axle back in place (see page 18).