

## BEARING ADJUSTMENT ON iO TRACK

**Important note:** the hub on an iO Track wheel has been pre-adjusted at the factory for optimum use and to prevent premature wear. The free play can be modified. Incorrect free play adjustments can damage the bearings on the iO Track wheel or permanently alter their performance.

### Tools needed:

- 15 mm open-end wrench



### 1) If there is any play:

Use a 15 mm open-end wrench to very lightly tighten the lock nut by monitoring the play at the top of the wheel.



### 2) In case of tightening

Loosen the lock nut approximately  $\frac{1}{2}$  turn, unlock the wheel, remove it from the frame and remove the retaining screws. Give a light mallet tap on the axle lock nut to achieve freer rotation, fit the wheel back on the frame and perform the adjustment again as in the first case.