NEW HUB CAP: COSMIC CARBONE SLR / SR

Tools needed

• 1 fine-tip flat screwdriver (5 x 125 mm for example)

Step 1:

Remove the old cap.



Unclip and remove the old hub cap by pressing on the inside with your thumbs while lifting the outside with your fingers.

Step 2: Install the new cap.





Position the new cap, making sure that its teeth are not touching the spokes.



Place your thumbs on the two opposite edges of the cap and press to clip the cap onto the hub body.



positioned.

Caution: The cap must not touch the spokes.

Check that the cap is properly

Step 3: Remove the new cap.



Insert a flat-tip screwdriver (ideally 5 x 125 mm) fully into an opening at the junction of two spokes. The tip of the screwdriver should be against the hub body.





Caution: the screwdriver must be correctly positioned between two spokes and be in contact with the hub body. Incorrect positioning may result in spoke damage.

Use the screwdriver to raise and remove the cap.