

CROSSMAX™ ST DISC

USE: Use only on a Cross Mountain or Cross Country MTB fitted with disc brakes. Any other use (such as on a tandem, Cyclo-Cross bike, road bike, free-ride or downhill bike...) is strongly inadvisable, is the sole responsibility of the user and voids the Mavic warranty.

WHEEL WEIGHTS WITHOUT QUICK RELEASE SKEWER:



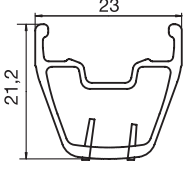

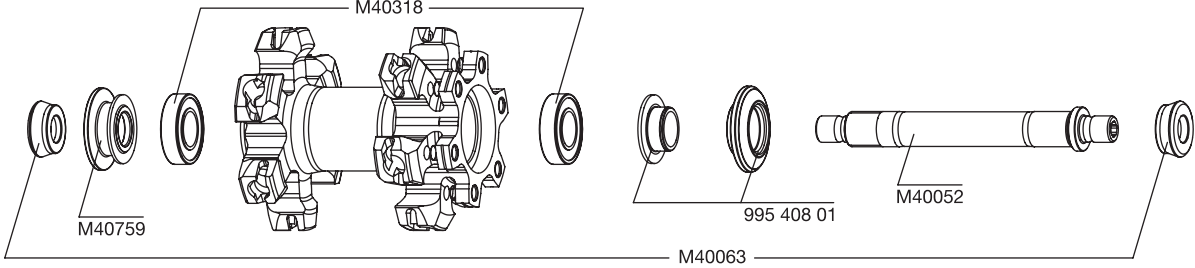
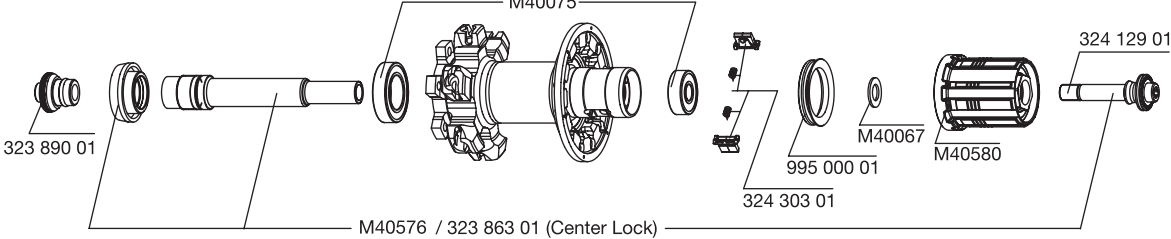
	INT.	CL
Front:	765 g	760 g
Rear:	890 g	885 g

WHEEL REFERENCES INT. STANDARD:

Front:	995 118 10
Rear:	995 119 13
Pair:	995 120 14

WHEEL REFERENCES CENTER LOCK:

Front:	995 144 10
Rear:	995 145 13
Pair:	995 146 14

RIMS	SALES REFERENCES: Front: 995 400 10 Rear: 995 400 13															
WIDTH	VALVE HOLE Ø  Ø: 6.5 mm Length: ≥ 32 mm	RECOMMENDED TIRE WIDTH AND PRESSURE  Ø 26" only ETRTO 559 x 19 and UST Tubeless compatible Recommended tire width: 1.5 to 2.3														
	 Recommended tire pressure: See page 17															
	<p>When replacing the front rim:</p> <ol style="list-style-type: none"> 1. With the valve hole near you, the raised indicator bump must be to the left of the valve hole 2. The spoke in the 1st hole to the right of the valve hole should be inserted on the disc side and should be a non-braking spoke. <p>When replacing the rear rim:</p> <ol style="list-style-type: none"> 1. With the valve hole near you, the 2 raised indicator bumps must be to the right of the valve hole; 2. The spoke in the 1st hole to the right of the valve hole should be inserted on the drive side into a marked hub hole. 															
HUBS	MAINTENANCE: Clean with a dry cloth or soap and water. Do not use pressurized water.															
																
																
WHEEL BUILDING	REFERENCES AND LENGTHS:	Front: 995 401 01, length 261 mm (per 12 + 1 decorated, integrated nipples) Rear drive side: 995 402 01, length 248 mm (per 12, integrated nipples) Rear non-drive side: 995 403 01, length 263 mm (per 12 + 1 decorated, integrated nipples)														
FEATURES:	LACING PATTERN:	TENSION:														
Black (+1 decorated spoke per wheel), round, Zical, straight pull spokes with integrated aluminum M7 nipples (self-locking)	Front: crossed 2 on both sides Rear: Isopulse	Front: 115 to 150 kg Rear drive side: 115 to 150 kg														
ACCESSORIES	WHEELS SUPPLIED WITH:	MAINTENANCE														
<ul style="list-style-type: none"> • BX 601 front quick release skewer M40140 • BX 601 rear quick release skewer M40141 • Removable UST valve 995 282 01 (with front wheel) • Computer magnet M40540 • M7 spoke wrench M40494 (with rear wheel) • Free play adjustment wrench M40123 (with rear wheel) • User guide and warranty card 		<table border="0"> <tbody> <tr> <td>Replacing the front axle and bearings</td> <td>See page 19</td> </tr> <tr> <td>Replacing the rear axle</td> <td>See page 20</td> </tr> <tr> <td>Maintaining and replacing the free wheel mechanism</td> <td>See page 21</td> </tr> <tr> <td>Replacing the rear bearings</td> <td>See 2003 TM page 22</td> </tr> <tr> <td>Replacing a spoke</td> <td>See 2003 TM page 24</td> </tr> <tr> <td>Replacing the front rim</td> <td>See page 22</td> </tr> <tr> <td>Replacing the rear rim</td> <td>See 2006 TM page 17</td> </tr> </tbody> </table> <p>To quickly consult this information in a practical manner, refer to www.tech-mavic.com</p>	Replacing the front axle and bearings	See page 19	Replacing the rear axle	See page 20	Maintaining and replacing the free wheel mechanism	See page 21	Replacing the rear bearings	See 2003 TM page 22	Replacing a spoke	See 2003 TM page 24	Replacing the front rim	See page 22	Replacing the rear rim	See 2006 TM page 17
Replacing the front axle and bearings	See page 19															
Replacing the rear axle	See page 20															
Maintaining and replacing the free wheel mechanism	See page 21															
Replacing the rear bearings	See 2003 TM page 22															
Replacing a spoke	See 2003 TM page 24															
Replacing the front rim	See page 22															
Replacing the rear rim	See 2006 TM page 17															