

# CROSSTRAIL™ DISC

**USE:** Use only on a Cross Mountain or Cross Country MTB fitted with disc brakes. Any other use (such as on a tandem, Cyclo-Cross bike, road bike, free-ride or downhill bike...) is strongly inadvisable, is the sole responsibility of the user and voids the Mavic warranty.

## WHEEL WEIGHTS WITHOUT QUICK RELEASE SKEWER:

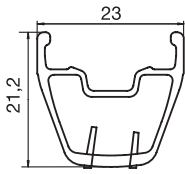



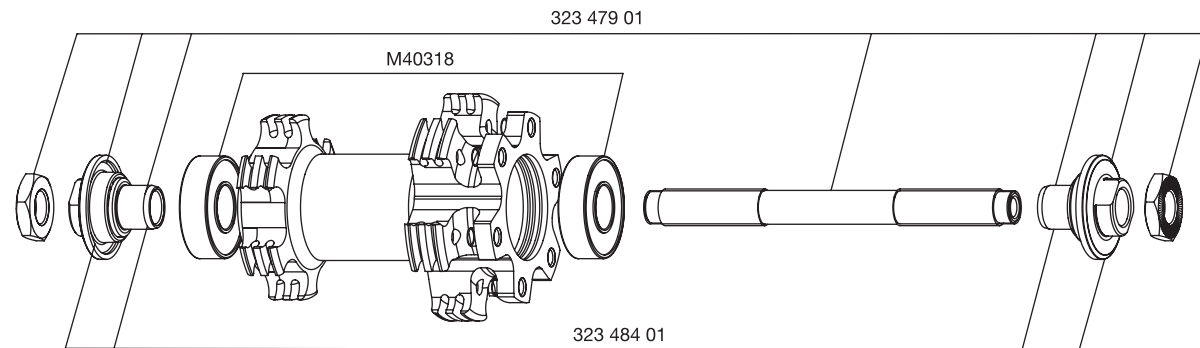
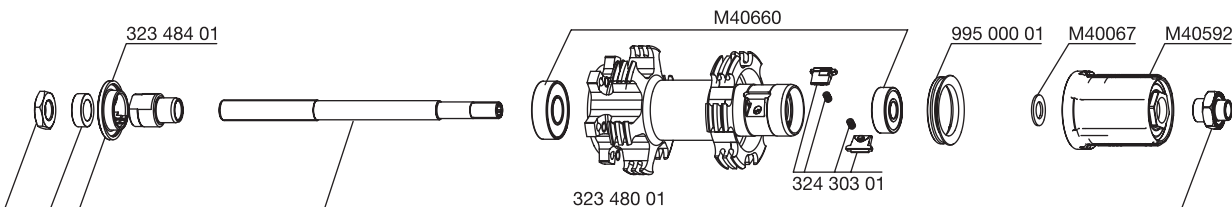
	INT.	CL
Front:	845 g	840 g
Rear:	975 g	970 g

## WHEEL REFERENCES INT. STANDARD:

Front:	995 196 10
Rear:	995 197 13
Pair:	995 198 14

## WHEEL REFERENCES CENTER LOCK:

Front:	995 202 10
Rear:	995 203 13
Pair:	995 204 14

<b>RIMS</b>		<b>SALES REFERENCES:</b> Front: 995 418 10 Rear: 995 418 13	
<b>WIDTH</b> 		<b>VALVE HOLE Ø</b>  Ø: 6.5 mm Length: ≥ 32 mm	<b>RECOMMENDED TIRE WIDTH AND PRESSURE</b>  Ø 26" only ETRTO 559 x 19 and UST Tubeless compatible Recommended tire width: 1.5 to 2.3  Recommended tire pressure: See page 17
<b>When replacing the front rim:</b> 1. With the valve hole near you, the raised indicator bump must be to the left of the valve hole 2. The spoke in the 1st hole to the right of the valve hole should be inserted on the disc side and should be a non-braking spoke. <b>When replacing the rear rim:</b> 1. With the valve hole near you, the 2 raised indicator bumps must be to the right of the valve hole; 2. The spoke in the 1st hole to the right of the valve hole should be inserted on the drive side and should be a non-traction spoke.			
<b>HUBS</b>		<b>MAINTENANCE:</b> Clean with a dry cloth or soap and water. Do not use pressurized water.	
			
			
<b>WHEEL BUILDING</b>		<b>REFERENCES AND LENGTHS</b> Front and rear: 995 419 01, length 273 mm (per 12, with nipples).	
<b>FEATURES:</b> Black, bladed, stainless steel, straight pull spokes with integrated M7 nipples (self-locking)		<b>LACING PATTERN:</b> Front and rear: crossed 2 on both sides	<b>TENSION:</b> Front: 90 to 125 kg Rear drive side: 110 to 140 kg
<b>ACCESSORIES</b>		<b>MAINTENANCE</b>	
<b>WHEELS SUPPLIED WITH:</b> <ul style="list-style-type: none"><li>• Front quick release skewer M40350</li><li>• Rear quick release skewer M40352</li><li>• Removable UST valve 995 282 01</li><li>• Wrench for aerodynamic spokes</li><li>• User guide and warranty card</li></ul>		Replacing the front axle and bearings Replacing the rear axle Maintaining and replacing the free wheel mechanism Replacing the rear bearings Replacing a spoke Replacing the front rim Replacing the rear rim  To quickly consult this information in a practical manner, refer to <a href="http://www.tech-mavic.com">www.tech-mavic.com</a>	
		See 2004 TM page 19 See 2004 TM page 20 See page 21 See 2004 TM page 22 See 2004 TM page 25 See 2004 TM page 28 See 2004 TM page 29	