

# CROSSTRAIL™

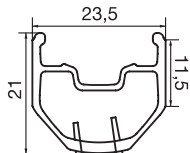



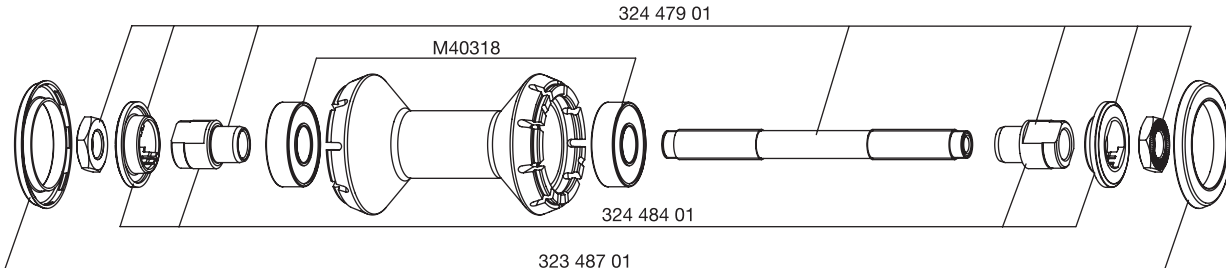
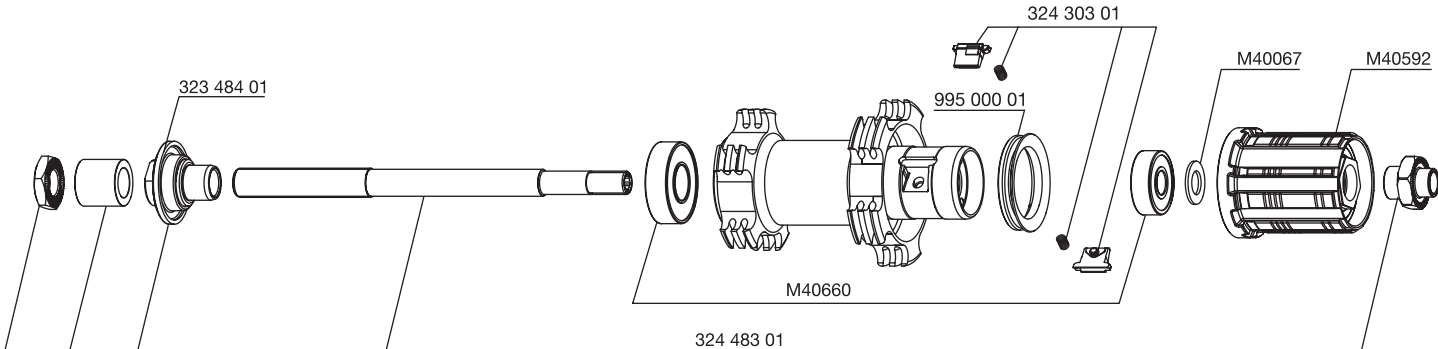
**USE:** Use only on a Cross Country or Cross Mountain MTB. Any other use (such as on a tandem, Cyclo-Cross bike, road bike, free-ride or downhill bike...) is strongly inadvisable, is the sole responsibility of the user and voids the Mavic warranty.

## WHEEL WEIGHTS WITHOUT QUICK RELEASE SKEWER:

Front: 795 g  
Rear: 955 g

## WHEEL REFERENCES:

Front: 995 208 10  
Rear: 995 209 13  
Pair: 995 210 14

<b>RIMS</b>		<b>SALES REFERENCES:</b> Front: 995 424 10 Rear: 995 424 13	
<b>WIDTH</b> 	<b>VALVE HOLE Ø</b>  Ø: 6.5 mm Length: ≥ 32 mm	<b>RECOMMENDED TIRE WIDTH AND PRESSURE</b>  Dimensions: Ø 26" only ETRTO 559 x 19 and UST Tubeless compatible Recommended tire width: 1.5 to 2.3  Recommended tire pressure: See page 17	
<b>When replacing the rear rim:</b> 1. With the valve hole near you, the 2 raised indicator bumps must be to the right of the valve hole; 2. The spoke in the first hole to the right of the valve hole should be inserted on the drive side.			
<b>HUBS</b>		<b>MAINTENANCE:</b> Clean with a dry cloth or soap and water. Do not use pressurized water.	
			
			
<b>WHEEL BUILDING</b>		<b>REFERENCES AND LENGTHS:</b> Front: 995 425 01, length 258 mm (per 9, integrated nipples) Rear: 995 426 01, length 279 mm (per 10, integrated nipples)	
<b>FEATURES:</b> Black, bladed, stainless steel, straight pull spokes with integrated M7 nipples (self-locking)		<b>LACING PATTERN:</b> Front: radial Rear: crossed 2 on both sides	
		<b>TENSION:</b> Front: 90 to 125 kg Rear drive side: 110 to 140 kg	
<b>ACCESSORIES</b>		<b>MAINTENANCE</b>	
<b>WHEELS SUPPLIED WITH:</b> <ul style="list-style-type: none"><li>• Front quick release skewer M40350</li><li>• Rear quick release skewer M40352</li><li>• Removable UST valve 995 282 01</li><li>• Wrench for aerodynamic spokes</li><li>• User guide and warranty card</li></ul>		<ul style="list-style-type: none"><li>Replacing the front axle and bearings</li><li>Replacing the rear axle</li><li>Maintaining and replacing the free wheel mechanism</li><li>Replacing the rear bearings</li><li>Replacing a spoke</li><li>Replacing the front rim</li><li>Replacing the rear rim</li></ul>	
		<div>See 2004 TM page 19</div> <div>See 2004 TM page 20</div> <div>See page 21</div> <div>See 2004 TM page 22</div> <div>See 2004 TM page 25</div> <div>See 2004 TM page 26</div> <div>See 2004 TM page 27</div>	
To quickly consult this information in a practical manner, refer to <a href="http://www.tech-mavic.com">www.tech-mavic.com</a>			

See 2004 TM page 19  
 See 2004 TM page 20  
 See page 21  
 See 2004 TM page 22  
 See 2004 TM page 25  
 See 2004 TM page 26  
 See 2004 TM page 27